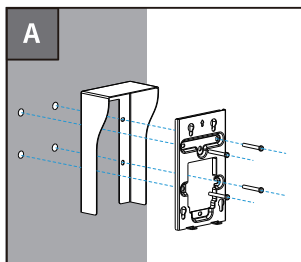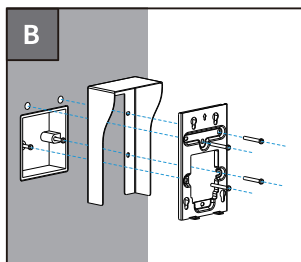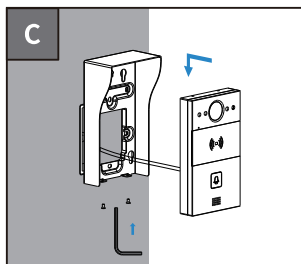## 1. On-wall installation

Without embedded box on the wall

Use four **ST4x20 crosshead screws** to secure the **rain cover** and **wall-mounting bracket** to the wall in sequence.
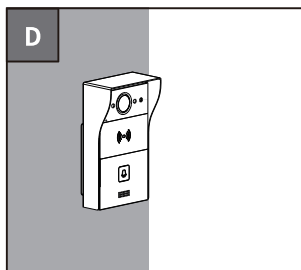
With embedded box on the wall

Use two **ST4x20 crosshead screws** and two M4x30 crosshead screws to secure the **rain cover** and **wall-mounting bracket** to the wall in sequence.

a. After completing the wiring and installing the accessories on the back of the device according to the R20A Quick Guide, insert the four **wall-mounting screws** on the device into the corresponding holes on the wall-mounting bracket.
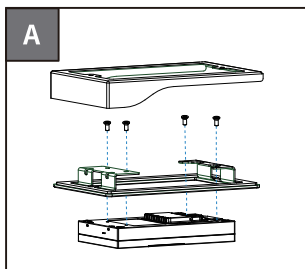
b. Press down to slide the **wall-mounting screws** into the groove.

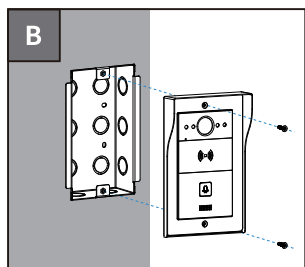c. Use **Allen wrench** to tighten the device with two **M3x6 hex socket screws**.
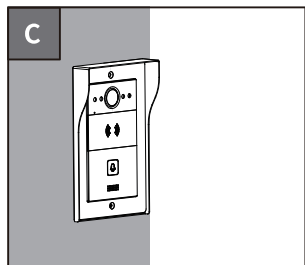
Installation is done.

2. In-wall installation

A

a. Align the main unit with the slot of the **flush-mounting bracket,** ensuring the device's direction matches the arrow on the bracket.

b. Secure the main unit to the **flush-mounting bracket** using four **M3x6 crosshead screws**.

c. Fit the **rain cover** onto the **flush-mounting bracket**.

B

a. After completing the wiring and installing the accessories on the back of the device according to the R20A Quick Guide, sequentially insert the main unit into the **rain cover** and then into the **flush-mounting box**.

b. Secure the **flush-mounting bracket** to the **flush-mounting box** using two **M4x15 Torx head screws**.

C

Installation is done.

Notice Information